

# SPARE PARTS LIST

PAGE 1

## MODEL: BJR181

ITEM	PART NO.	DESCRIPTION	QTY	NOTE
001	163453-5	SHOE	1	PC.
002	421945-3	INSULATION COVER	1	PC.
003	424147-0	PROTECTOR	1	PC.
004	257952-8	RETAINING RING (EXT) 18	1	PC.
005	310285-3	DRIVING SLEEVE	1	PC.
006	256492-3	SHOULDER PIN 5	1	PC.
007	233345-3	COMPRESSION SPRING 6	1	PC.
008	268094-3	PIN 3	1	PC.
009	331720-8	GUIDE SLEEVE	1	PC.
010	256158-5	PIN 3	1	PC.
011	417791-0	DRIVING SLEEVE GUIDE	1	PC.
012	418311-3	SLEEVE	1	PC.
013	345214-7	PUSH PLATE	1	PC.
014	233025-1	COMPRESSION SPRING 2	1	PC.
015	231687-9	TORSION SPRING 17	1	PC.
016	213151-2	OIL SEAL 14	1	PC.
017	213174-0	X RING 14	1	PC.
018	154813-2	GEAR HOUSING COVER COMPLETE	1	PC.
019	418806-6	CAP	1	PC.
020	631689-9	LED CIRCUIT	1	PC.
021	911243-8	PAN HEAD SCREW M5X25	4	PC.
022	232221-8	LEAF SPRING A	1	PC.
023	162236-0	SHIFT BUTTON	1	PC.
024	421946-1	SEAL RING	1	PC.
025	345480-6	SLIDE PLATE	1	PC.
026	214170-1	PLANE BEARING 14A	1	PC.
027	341462-6	PLATE	1	PC.
028	911225-0	PAN HEAD SCREW M5X16	2	PC.
029	154788-5	SLIDER COMPLETE	1	PC.
030	214170-1	PLANE BEARING 14A	1	PC.
031	341462-6	PLATE	1	PC.
032	911225-0	PAN HEAD SCREW M5X16	2	PC.
033	265148-7	TORX SOCKET HEAD SCREW M5X14	2	PC.
034	344795-8	PLATE C	1	PC.
035	265148-7	TORX SOCKET HEAD SCREW M5X14	2	PC.
036	344795-8	PLATE C	1	PC.
037	212959-1	NEEDLE BEARING 708	1	PC.
038	125423-2	GEAR ASS'Y	1	PC.
039	212080-6	NEEDLE BEARING 1012	1	PC.
040	253797-2	FLAT WASHER 14	1	PC.
041	232222-6	LEAF SPRING B	1	PC.
042	345479-1	SHOE GUIDE	1	PC.
043	265165-7	TORX SOCKET C.S. HEADSCREW M6X16	1	PC.
044	266041-8	TAPPING SCREW 5X25	4	PC.
045	154812-4	GEAR HOUSING COMPLETE	1	PC.
046	912207-5	COUNTERSUNK HEAD SCREW M5X10	2	PC.
047	951057-3	SPRING PIN 3-12	1	PC.
048	313127-0	JOINT	1	PC.
049	233455-6	COMPRESSION SPRING 7	1	PC.
050	262561-0	SLEEVE 6	1	PC.
051	281218-4	HOOK	1	PC.
052	264002-2	SQUARE NUT M5	2	PC.
053	125321-0	HOOK ASS'Y	1	PC.
054	961052-5	RETAINING RING S-12	1	PC.
055	210102-6	BALL BEARING 6001DDW	1	PC.
056	961016-9	STOP RING E-10	1	PC.
057	911225-0	PAN HEAD SCREW M5X16	2	PC.
058	285726-7	BEARING RETAINER 63	1	PC.
059	241869-5	FAN 55	1	PC.
060	519176-7	ARMATURE ASS'Y 18V	1	PC.

# SPARE PARTS LIST

PAGE 2

## MODEL: BJR181

ITEM	PART NO.	DESCRIPTION	QTY	NOTE
061	210062-2	BALL BEARING 607ZZ	1	PC.
062	419333-6	BAFFLE PLATE	1	PC.
063	638107-8	YOKE UNIT	1	PC.
064	419327-1	COVER	1	PC.
065	419330-2	MOTOR HOUSING	1	PC.
066	266292-3	TAPPING SCREW 4X65	2	PC.
067	643941-3	BRUSH HOLDER CAP	2	PC.
068	195022-4	CARBON BRUSH CB-441	1	SET
069	643949-7	BRUSH HOLDER R	1	PC.
070	862359-1	BJR181 NAME PLATE	1	PC.
071	188046-7	HANDLE SET	1	SET
072	643838-6	TERMINAL	1	PC.
073	419336-0	SWITCH LEVER	1	PC.
074	650574-7	SWITCH C3LA-2A-LLM	1	PC.
075	232152-1	LEAF SPRING	1	PC.
076	419334-4	LOCK OFF BUTTON	1	PC.
077	631690-4	POWER SUPPLY CIRCUIT	1	PC.
078	643815-8	BRUSH HOLDER	1	PC.
079	911006-2	PAN HEAD SCREW M3X8	1	PC.
080	689116-0	HEAT SINK	1	PC.
081	266045-0	TAPPING SCREW 4X20	6	PC.
082	188046-7	HANDLE SET	1	SET